


Start-up valve in the Futura series

Setting the filling time

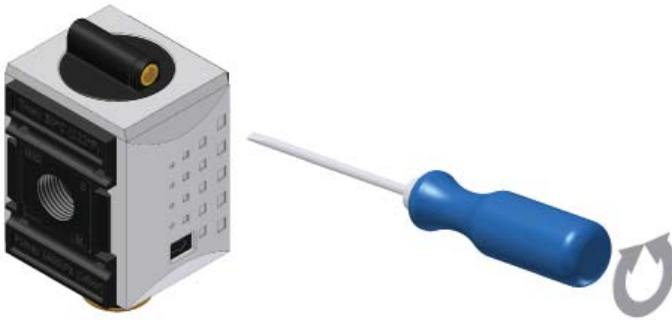

Setting the filling time

When the system is started up, the start-up valve prevents a sudden pressure build-up. The filling time can be changed at the adjusting screw.

The location of the screw varies depending on the size.

1. Remove the adjustment protection (a) (if present)
2. Turn the adjusting screw (e.g. with the screwdriver) clockwise to lengthen filling time or anticlockwise to shorten it.
3. Press the adjustment protection (a) into the adjusting screw (if present).

filling characteristic

