


Filter regulators and regulators in the Futura series

Setting the pressure

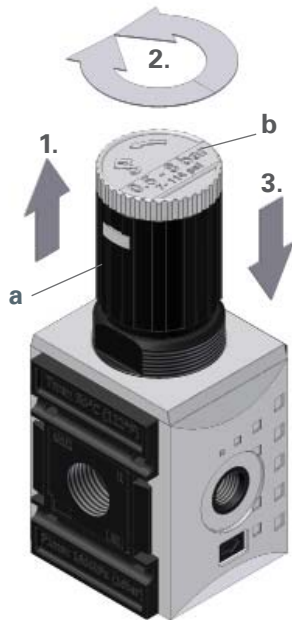

Setting the pressure

1. Pull the hand wheel (a) up.
2. Set the desired pressure by turning the hand wheel.
3. Push the hand wheel down. This will lock it again.

To readjust the pressure, the securing lugs must be completely retracted

Retract the securing lugs

Turn the upper rim of the hand wheel clockwise until the securing lugs have been completely retracted.