

Filter regulators and regulators in the Futura series

Locking the hand wheel



Locking the hand wheel

The hand wheel of the pressure control valve can be secured with a padlock (BG1 - BG4) in order to prevent unauthorized alteration of the pressure setting.

BG1 - BG4

1. Push the hand wheel down.
2. Turn the upper rim of the hand wheel anticlockwise into the locking position.
The securing lugs are extended..
3. Hang the padlock on one of the securing lugs and lock it.